 


## Installation

Using to the UK valve type

① Loosing (B) is OFF light ② Tightening (B) is ON light




 If using to the French valve type it needs to add the part (F)





 Screwing the LED light valve into the original valve

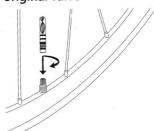

• How to change the battery?

1 Loosing the part (B)



(2) Change new batteries (3 pcs x LR41)



3 Tightening the part (B)

