TOCON_C4



UVC-only SiC based UV photodetector with integrated amplifier

GENERAL FEATURES





Properties of the TOCON_C4

- UVC-only SiC based UV photodetector in TO₅ housing with diffusor
- spectral response compliant with DVGW W294
- o... 5 V voltage output, peak wavelength at 275 nm
- max. radiation (saturation limit) at 254 nm is 18 μW/cm², minimum radiation (resolution limit) is 1,8 nW/cm²
- · Applications: UVC irradiation measurement, water disinfection

What is a TOCON?

A TOCON is a 5 Volt powered UV photodetector with integrated amplifier converting UV radiation into a o... 5V voltage output. The V_{out} pin of the TOCON can be directly connected to a controller, a voltmeter or any other data analyzing device with voltage input. Highly modern electronic components and a hermetically sealed metal housing with UV glass window eliminates noise caused by parasitic resistance paths inside the package or EMI. A TOCON is a perfect solution for each industrial UV sensing application starting from flame detection at pW/cm² level up to UV curing lamp control at W/cm² level. This thirteen orders of magnitude range is covered by ten different TOCONs that differ by their sensitivity. The TOCONs are produced as UV broadband sensors or with filters for selective measurement.

Silicon Carbide (SiC) detector chip inside

Sophisticated electronics make a TOCON a reliable component in harsh environments as well as for extremely low or extremely high UV radiation. But what makes the TOCON a quasi eternally living sensor is the sglux in-house produced SiC detector chip featured by a PTB-reported extreme radiation hardness.

NOMENCLATURE

TOCON_	ABC, A, B, C, blue or GaP	1 10
	Spectral response	Irradiance limits ($V_{supply}=5V$, $\lambda=\lambda_{peak}$)
	ABC = broadband	1 = 1,8 pW/cm ² 18 nW/cm ²
	$\lambda_{\text{max}} = 290 \text{ nm} \lambda_{\text{S10\%}} = 227 \text{ nm} \dots 360 \text{ nm}$	2 = 18 pW/cm ² 180 nW/cm ²
	A = UVA $\lambda_{max} = 331 \text{nm} \lambda_{S10\%} = 309 \text{nm} \dots 367 \text{nm}$	3 = 180 pW/cm ² 1,8 μW/cm ²
	B = UVB	4 = 1,8 nW/cm ² 18 μW/cm ²
	$\lambda_{\text{max}} = 280 \text{ nm} \lambda_{\text{S10\%}} = 243 \text{ nm} \dots 303 \text{ nm}$	5 = 18 nW/cm ² 18ο μW/cm ²
	C = UVC	6 = 180 nW/cm ² 1,8 mW/cm ²
	$\lambda_{\text{max}} = 275 \text{ nm} \lambda_{\text{S}_{10}\%} = 225 \text{ nm} \dots 287 \text{ nm}$	$7 = 1.8 \mu W/cm^2 \dots 18 mW/cm^2$
	Blue = blue light $\lambda_{max} = 445 \text{ nm} \lambda_{510\%} = 390 \text{ nm} \dots 515 \text{ nm}$	8 = 18 μW/cm ² 180 mW/cm ²
	GaP = UV + VIS	9 = 18ο μW/cm ² 1,8 W/cm ²
	$\lambda_{\text{max}} = 445 \text{ nm}$ $\lambda_{\text{S10\%}} = 190 \text{ nm} \dots 570 \text{ nm}$	10 = 1,8 mW/cm ² 18 W/cm ²
	E = UV-Index spectral response according to CIEo87	2 = 0 UVI 30 UVI



TOCON_C4




UVC-only SiC based UV photodetector with integrated amplifier

SPECIFICATIONS

2/4

Symbol	Value	Unit
S_{max}	280	$\text{mV}/\mu\text{W}/\text{cm}^2$
λ_{max}	275	nm
-	225 287	nm
VB	> 10 ¹⁰	-
V_{Supply}	2,5 5	V
V_{Sat}	V _{Supply} - 5%	V
V_{Offset}	50	μV
T_c	< -0,3	%/K
1	150	μΑ
В	15	Hz
t_{rise}	0,075	S
T_{opt}	−25 +85	°C
T_{stor}	-40 +100	°C
T_{sold}	300	°C
	S _{max} Amax - VB Vsupply Vsat Voffset Tc I B trise	S _{max} 280 λ _{max} 275 - 225 287 VB > 10 ¹⁰ Vsupply 2,5 5 Vsat Vsupply - 5% Voffset 50 Tc < -0,3 I 150 B 15 trise 0,075 Topt -25 +85 T _{stor} -40 +100

NORMALIZED SPECTRAL RESPONSIVITY

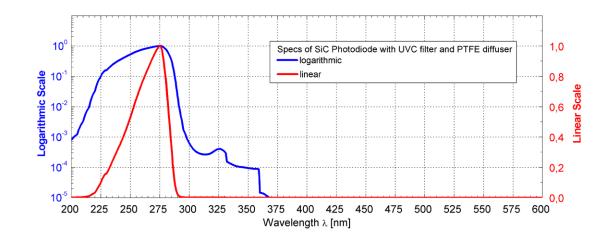



TOCON_C4



UVC-only SiC based UV photodetector with integrated amplifier


FIELD OF VIEW

3/4


Measurement Setup:

lamp aperture diameter: 10 mm
distance lamp aperture to second aperture: 17 mm
second aperture diameter: 10 mm
distance second aperture to detector: 93 mm
pivot level = top surface of the detector window

DRAWING

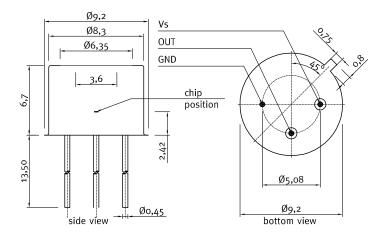

angle in °

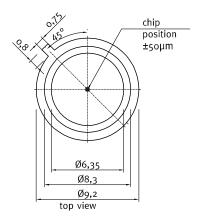

TOCON C4



UVC-only SiC based UV photodetector with integrated amplifier



APPLICATION NOTE FOR TOCONS

The TOCONs need a supply voltage of $V_{supply} = 2.5 \dots 5V_{DC}$ and can be directly connected to a controller or voltmeter. Please note that the theoretic maximum signal output is always a little less (approx. 5%) than the supply voltage. To learn more about perfect use of the TOCONs please refer to the TOCON FAQ list published at www.sglux.com.

CAUTION! Wrong wiring leads to destruction of the device.

For easy setup of the device please ask for a TOCON starter kit.



Miniature steel housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body, length 32 mm
- Integrated sensor connector (Binder 4-Pin plug) with 2m connector cable
- Easy to mount and to connect



Miniature PTFE housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors without concentrator lens
- Teflon (PTFE) M12x1 thread body, length 31 mm
- Wide field of view, dirt-repellant, water proof at wet side (IP 68)
- Integrated sensor connector (Binder 4-Pin plug) with 2m connector cable
- Easy to mount and connect, cleanable

The PTFE housing reduces the signal output by approx. 95%. Please consider this while selecting the TOCON's sensitivity range.



Plastic probes

- Optional feature for all TOCON detectors
- UV probes in small plastic housings with a TOCON inside
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 4-Pin plug)
- Cable available



Water pressure proof TOCON housing

- Optional feature for all TOCON detectors without concentrator lens
- G1/4" thread, 10 bar water pressure proof
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available

